Husqvarna[®]







This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

Read and understand all safety rules and operating instructions before using this tractor attachment.

Follow all safety rules and operating instructions provided by your vehicle's manufacturer when using attachment.

Never allow children or untrained persons to operate vehicle or attachment.

Do not exceed the vehicle manufacturer's towed weight limit.

Reduce vehicle speed and allow extra stopping distance when towing heavy loads.

Reduce vehicle speed and towed weight when operating on slopes.

Operate up and down slopes, never across the face of slopes.

Do not carry passengers on vehicle or attachment.

Avoid sudden turns or maneuvers.

Do not tow attachment on public roadways.

Do not remove warning decals from product.


Check product for worn, loose, or damaged parts before each use. If any damage is present, repair the product before using.


Check product for loose or missing fasteners before each use. Tighten or replace fasteners as needed before using.


Do not exceed vehicle speed of 6 miles per hour when towing Dump Cart.


Do not exceed Dump Cart rated weight capacity of 350 pounds.


Carton Contents

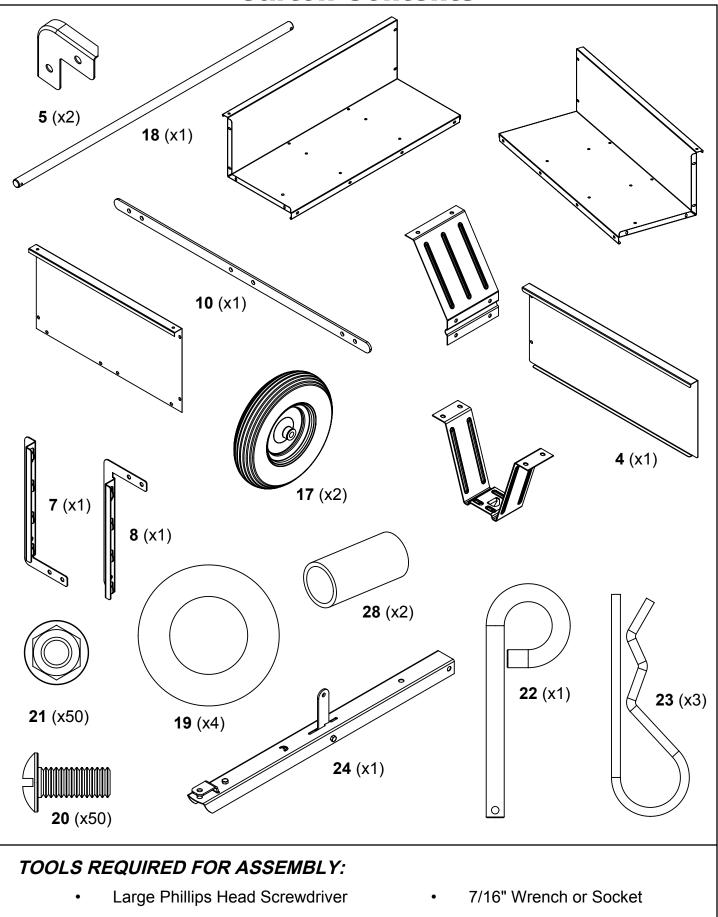

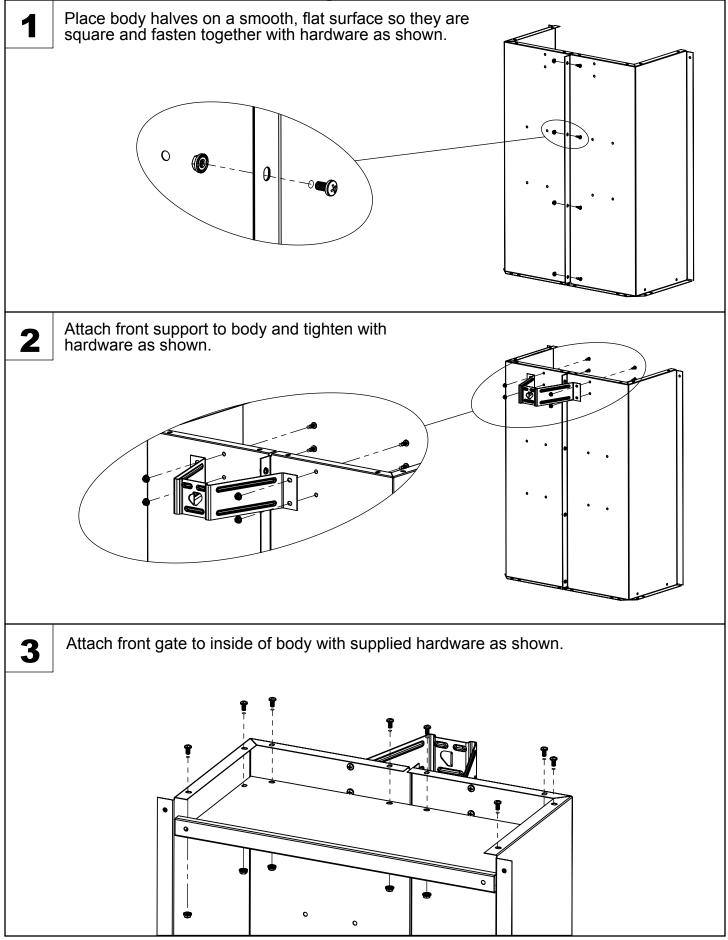

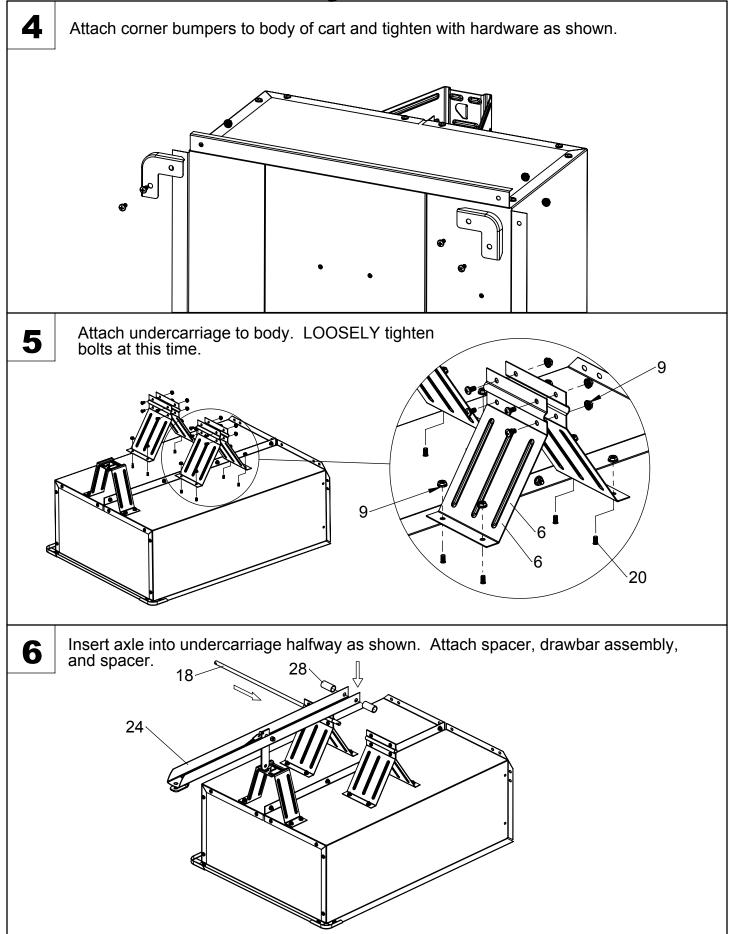

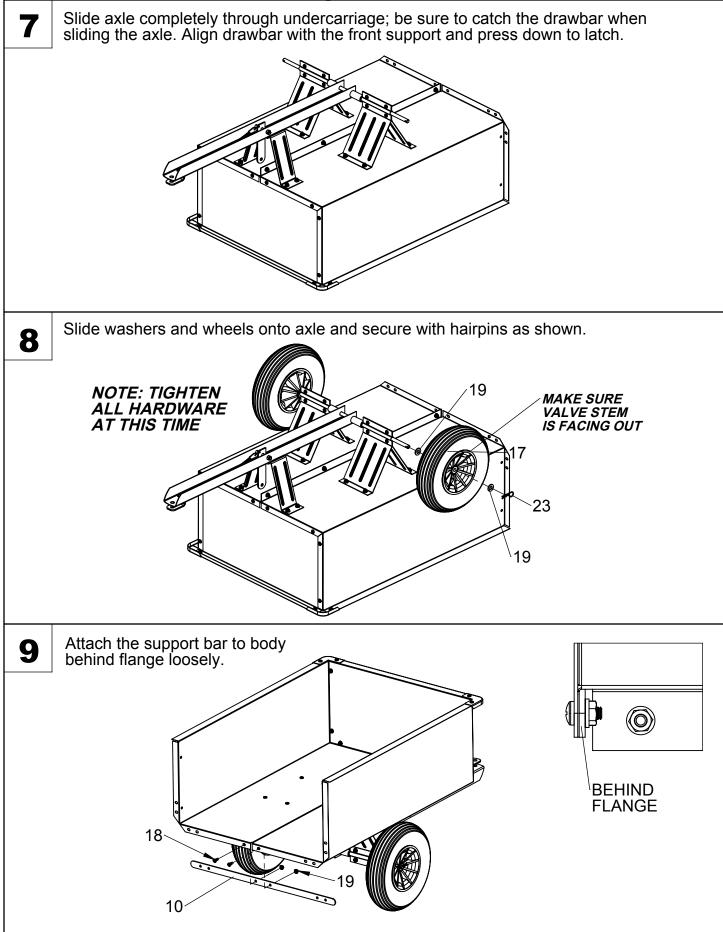

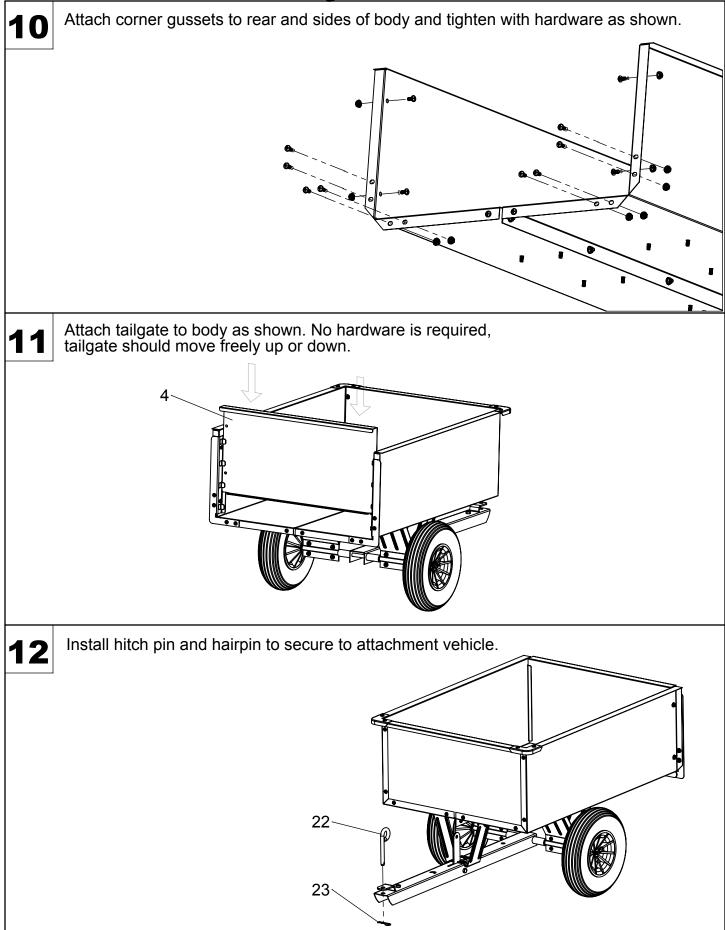

Before Using Dump Cart:

- 1. Check tire pressure and inflate to 30 psi if needed.
- 2. Read all Safety Rules found on page 1.

How to Use Dump Cart:

- 1. Attach Dump Cart to your tractor using the supplied hitch pin.
- 2. Do not exceed 350 pounds when loading material into the cart body.
- 3. Distribute the weight of the load as evenly as possible in the cart body for best handling.
- 4. When hauling heavy loads, verify that your vehicle has adequate towing and braking capacity.
- 5. Do not exceed 6 miles per hour when towing Dump Cart.

How to Empty Dump Cart:

- 6. Pull hand lever forward to release the latch mechanism.
- 7. Angle cart body as desired to guide the material to preferred location.
- 8. Lower the body and guide the latch into the drawbar and relatch.

Periodic Maintenance:

- Tighten fasteners as needed before each use
- Check tire pressure before each use
- Grease wheels annually

Warranty

If this product fails due to a defect in material or workmanship within THREE YEARS from the date of purchase, we will at our option repair or replace it free of charge. This warranty excludes tires and wheels, which are expendable and become worn during normal use.

This warranty does not cover:

- Repairs necessary because of operator abuse or negligence.
- Equipment used for commercial or rental purposes.
- Paint that is worn or faded due to normal use or exposure.

To arrange for product repair call 1-800-652-2321, or return this product to place of purchase for replacement.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. This warranty applies only while this product is in use in the United States.

In the space below record the purchase date of your Dump Cart.

Model Number ______ DC 350S / Article # 588 20 88-03

Purchase Date

Keep this Owner's Manual and your receipt in a safe place for future reference.

After the three year warranty period all replacement parts may be ordered by calling *1-800-652-2321*.

When ordering replacement parts, always give the following information:

- Product <u>9 cu ft STEEL DUMP CART</u>
- Model Number <u>DC 350S / Article # 588 20 88-03</u>
- Part Number ______
- Part Description ______

Repair Parts

περαπ Γατισ							
$\begin{array}{c} 4 \\ 1 \\ 3 \\ 3 \\ 2 \\ 2 \\ 2 \\ 2 \\ 2 \\ 2 \\ 2 \\ 2$							
ITEM	PART NO	DESCRIPTION	QTY	ITEM	PART NO	DESCRIPTION	QTY
1	6000949-O	BODY HALF, RIGHT	1	15	300131	SPRING, LATCH	1
2	6000948-O	BODY HALF, LEFT	1	16	300052	HEX BOLT, 3/8-16 X 3/4"	1
3	6000951-O	GATE, FRONT	1	17	300055	HEX BOLT, 3/8-16 X 3-1/2"	1
4	401051-O	CORNER GUARD	2	18	300061	HEX NUT, 3/8-16 C-LOCK	2
5	6000954-O	BAR SUPPORT, REAR	1	19	6000955	AXLE	1
	6003352-HG	,	1	20		FRONT SUPPORT	1
7		RETAINER GATE, RIGHT	1	21	6000487	PAN HEAD BOLT, 1/4-20 X 1/2"	50
8		RETAINER GATE, LEFT	1	22	6000961	SERRATED FLANGE NUT, 1/4-20	50
		AXLE HOLDER	4	23	300084	HAIRPIN COTTER	3
10		WHEEL (INCL BUSHINGS)	2	23	3001212	HDPE SPACER	2
11	6000617	1/2" SAE WASHER	4	25	6000533	PIN, HITCH	1
12	6000947	DRAWBAR	1	20	6000956-H	DRAWBAR ASSEMBLY (INCL 12-18)	1
		LATCH POST	1	20	6000957	HARDWARE BOLT BAG	1
				27		OWNERS MANUAL	1
14	401121	BRACKET, HITCH	1	ZŎ	6002412		

REPLACEMENT PARTS ORDERING

1-800-652-2321



(800)-652-2321