



# **TB-350S** 9 cu ft STEEL DUMP CART

READ AND FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTIONS BEFORE USING THIS EQUIPMENT



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

Read and understand all safety rules and operating instructions before using this tractor attachment.

Follow all safety rules and operating instructions provided by your vehicle's manufacturer when using attachment.

Never allow children or untrained persons to operate vehicle or attachment.

Do not exceed the vehicle manufacturer's towed weight limit.

Reduce vehicle speed and allow extra stopping distance when towing heavy loads.

Reduce vehicle speed and towed weight when operating on slopes.

Operate up and down slopes, never across the face of slopes.

Do not carry passengers on vehicle or attachment.

Avoid sudden turns or maneuvers.

Do not tow attachment on public roadways.

Do not remove warning decals from product.

Check product for worn, loose, or damaged parts before each use. If any damage is present, repair the product before using.

Check product for loose or missing fasteners before each use. Tighten or replace fasteners as needed before using.

Do not exceed vehicle speed of 6 miles per hour when towing Dump Cart.

Do not exceed Dump Cart rated weight capacity of 350 pounds.

## Warranty

## IF YOU ARE MISSING PARTS DO NOT RETURN TO STORE

Email cs@ohiosteel.com or call 1-800-652-2321, ext. 212

## Before you call, please email our customer service team at cs@ohiosteel.com with the following:

- 1. A description of the issue you are having
- 2. Photos of the issue that include an overall view and detailed view from multiple angles
- 3. If applicable, a short video showing the issue

## **Replacement Parts:**

### You can place your parts order online at ohiosteel.com/partsstore

- You can also reach our Customer Service Department at 1-800-652-2321, ext. 212
- If you are ordering replacement part(s) for your product, please note that some parts are only available as a repair kit.


If this product fails due to a defect in material or workmanship within THREE YEARS from the date of purchase, we will at our option, only with receipt of purchase, repair or replace it free of charge. This warranty excludes tires, bushings, and bearings which are expendable and become worn during normal use.


#### This warranty does not cover:


- Repairs necessary because of operator abuse or negligence.
- Equipment used for commercial or rental purposes.
- Paint that is worn or faded due to normal use or exposure.

To arrange for product repair visit **ohiosteel.com/customer-support** and fill out the warranty repair form. You can also call 1-800-652-2321, ext. 212 to speak to our Customer Service Team


This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. This warranty applies only while this product is in use in the United States.

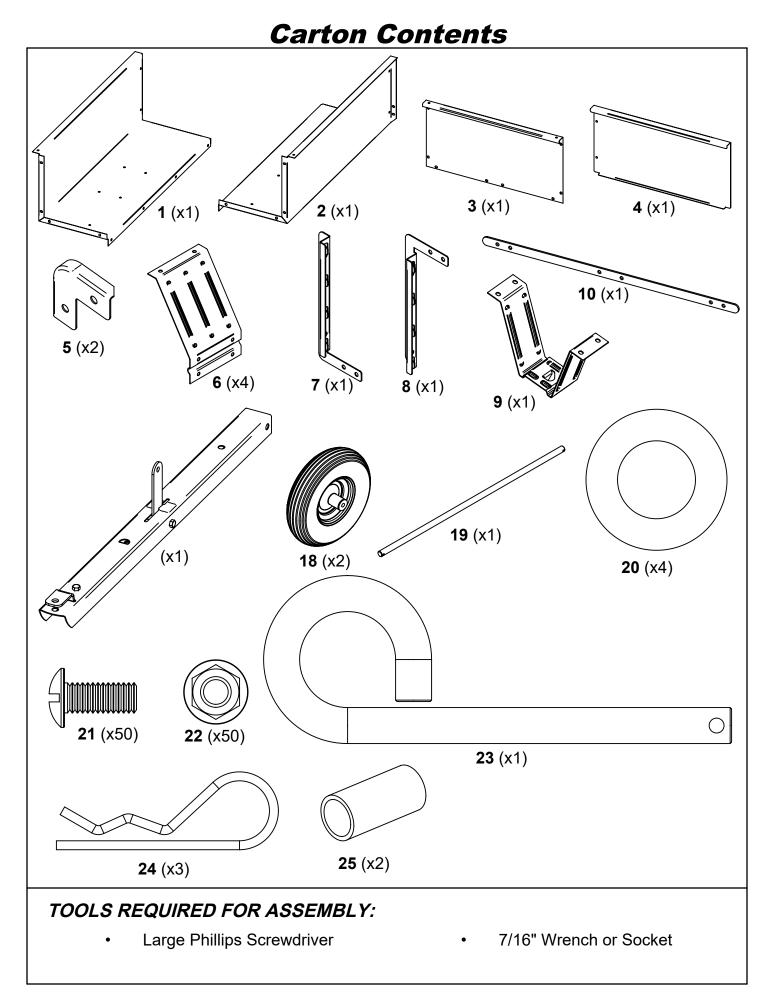

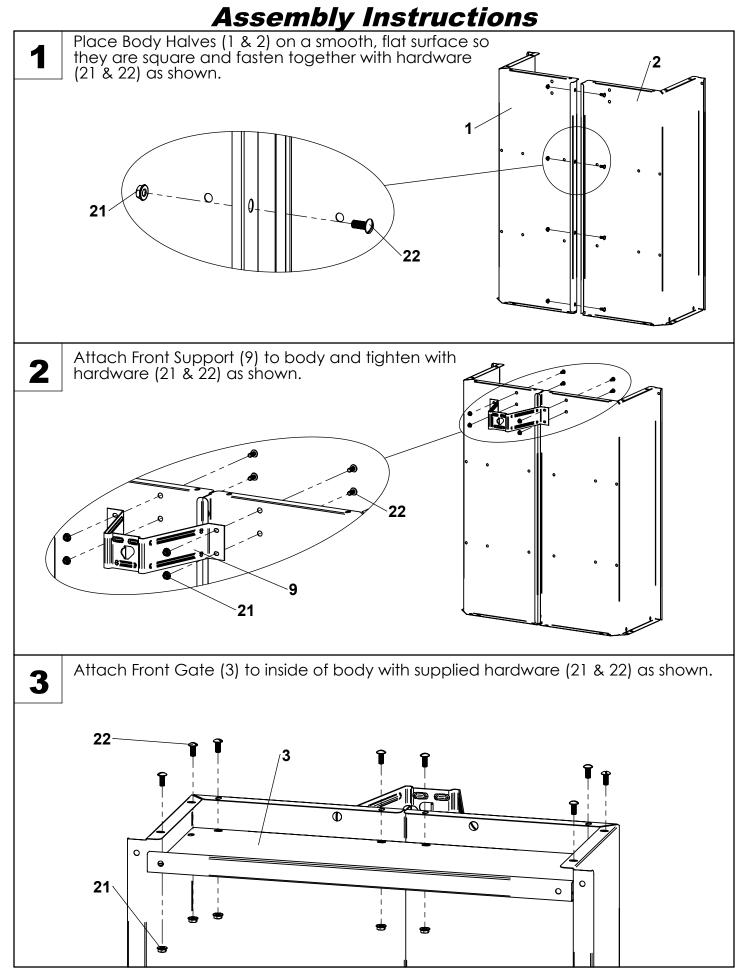


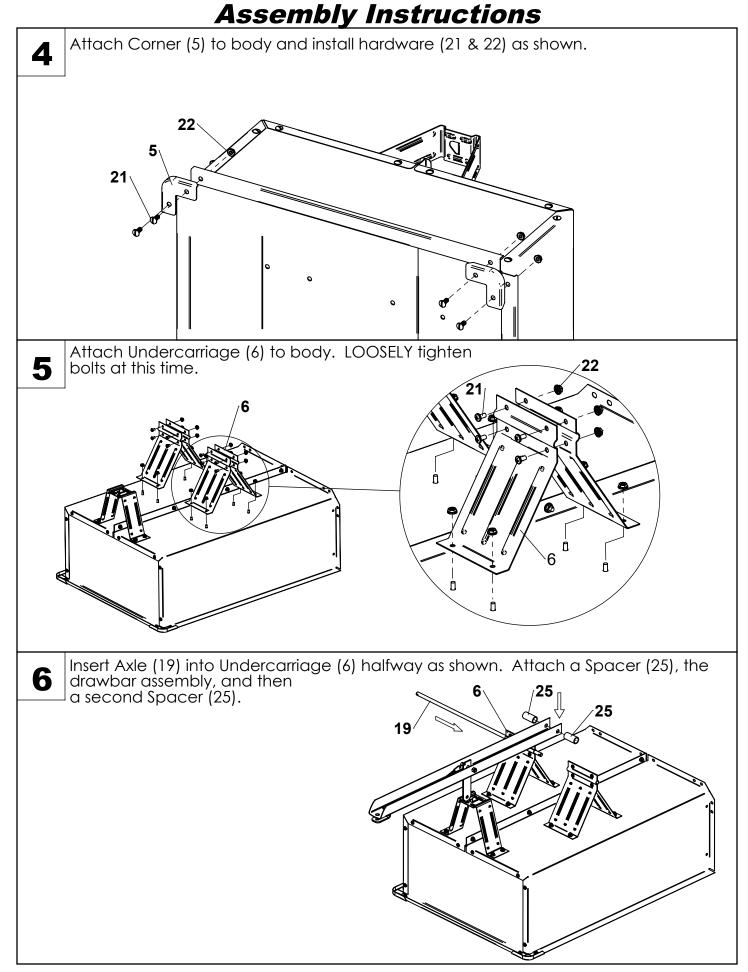

## Assembly Instructions

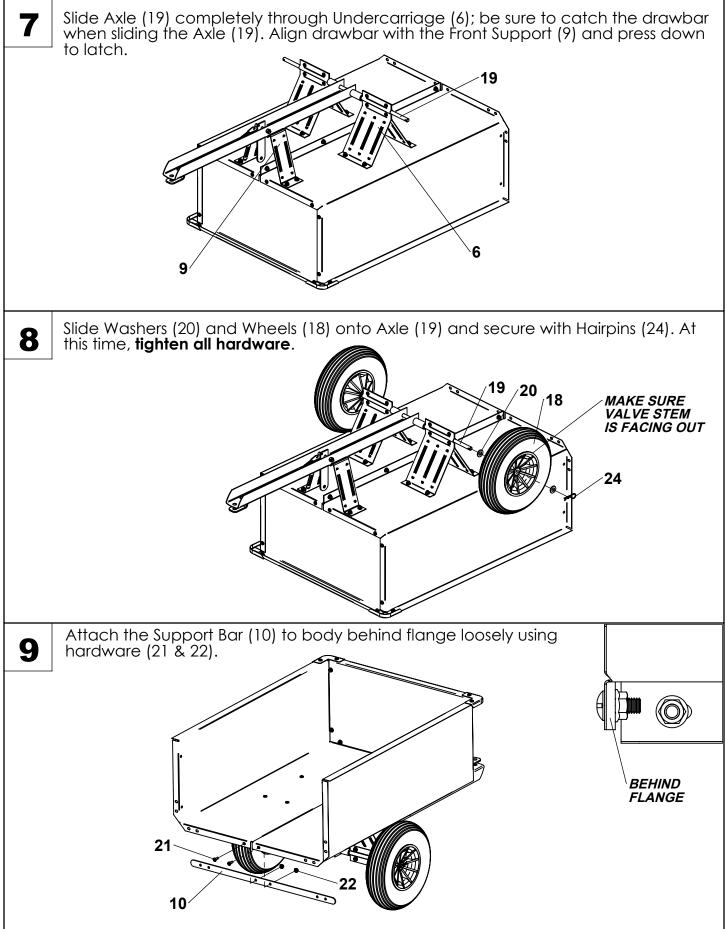

## **Assembly Instructions**

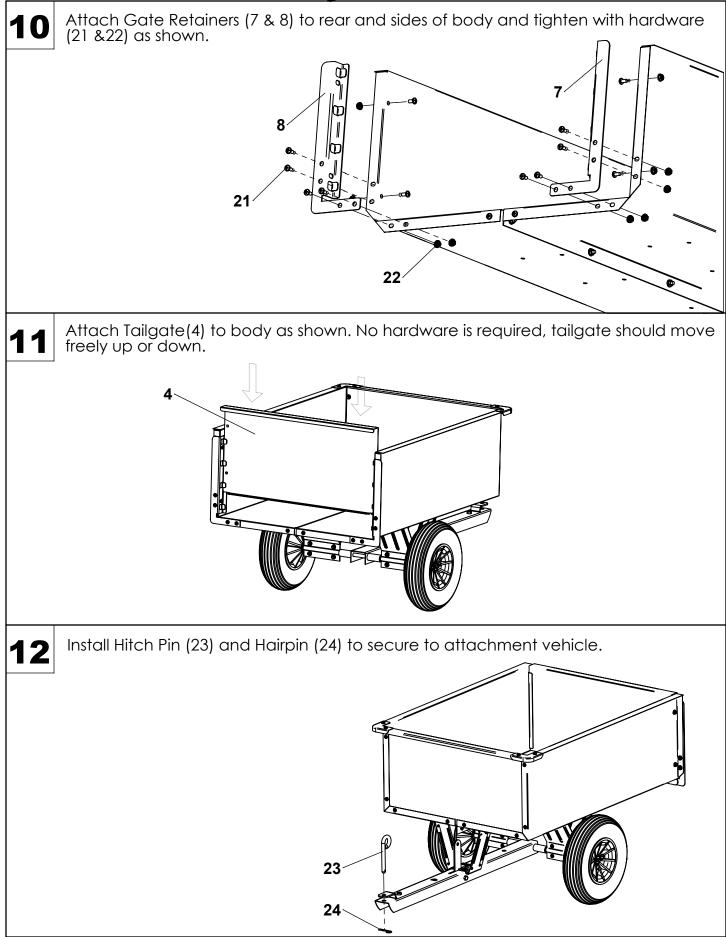

#### Before Using Dump Cart:

- 1. Check tire pressure and inflate to 30 psi if needed.
- 2. Read all Safety Rules found on page 1.

### How to Use Dump Cart:

- 1. Attach Dump Cart to your tractor using the supplied hitch pin.
- 2. Do not exceed 350 pounds when loading material into the cart body.
- 3. Distribute the weight of the load as evenly as possible in the cart body for best handling.
- 4. When hauling heavy loads, verify that your vehicle has adequate towing and braking capacity.
- 5. Do not exceed 6 miles per hour when towing Dump Cart.


### How to Empty Dump Cart:

- 6. Pull hand lever forward to release the latch mechanism.
- 7. Angle cart body as desired to guide the material to preferred location.
- 8. Lower the body and guide the latch into the drawbar and relatch.

#### **Periodic Maintenance:**

- Tighten fasteners as needed before each use
- Check tire pressure before each use
- Grease wheels annually

## **Repair Parts**

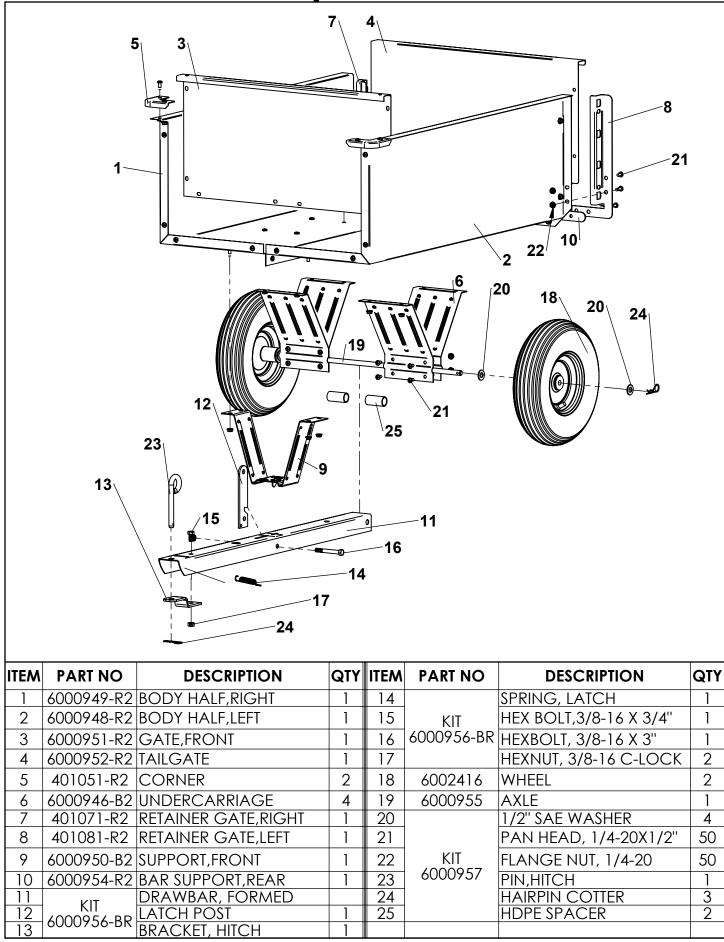

**REPLACEMENT PARTS ORDERING** 

OHIO STEEL INDUSTRIES 1-800-652-2321



# (800) 652-2321