


Repair Parts List - 610.241942

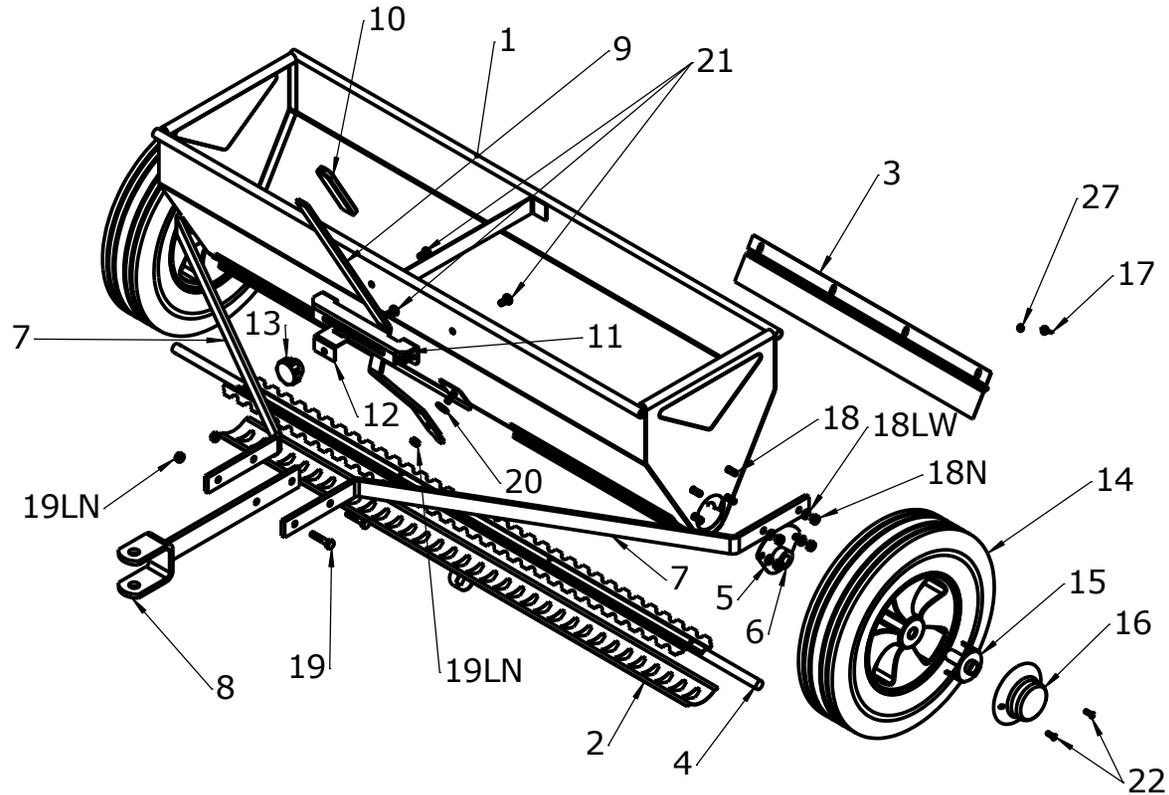

REF. NO.	PART NO.	AMT.	DESCRIPTION	REF. NO.	PART NO.	AMT.	DESCRIPTION
1	94-1	1	hopper assembly	16	94-16	2	hub cap
2	94-2	1	gate	17	STD541610	8	10-24 wing nut
3	94-3	2	scatter plate	18	94-18	4	bolt 1/4 x 5/8 pan head
4	94-4	1	axle-agitator assembly	18LW	STD551125	6	lock washer 1/4"
5	94-5	2	bearing bracket	18N	STD541025	6	hex nut 1/4"
6	94-6	2	nylon bearing	19	STD522512	2	bolt 1/4" x 1 1/4" hex
7	94-7	2	side bar	19LN	STD541425	3	lock nut 1/4"
8	94-8	1	hitch assembly	20	STD551025	1	flat washer 1/4"
9	94-9	1	adjustment lever	21	94-21	3	bolt 1/4" x 3/4" round
10	94-10	1	plastic grip	22	94-22	4	#8 self thread screw
11	94-11	1	calibration bracket	23	94-23	2	cotter pin 1/8" x 1"
12	94-12	1	adjustment stop	24	94-24	1	assembly manual
13	94-13	1	adjustment knob	25	94-25	1	application chart
14	94-14	2	wheel	26	94-26	8	carriage bolt 1/2"
15	94-15	1	drive wheel hub	27	STD551110	8	3/16" lock washer

FOR MISSING PARTS, Call 1-800-652-2321, Monday - Friday, 8 a.m. - 5 p.m. E.S.T.