


Replacement Parts

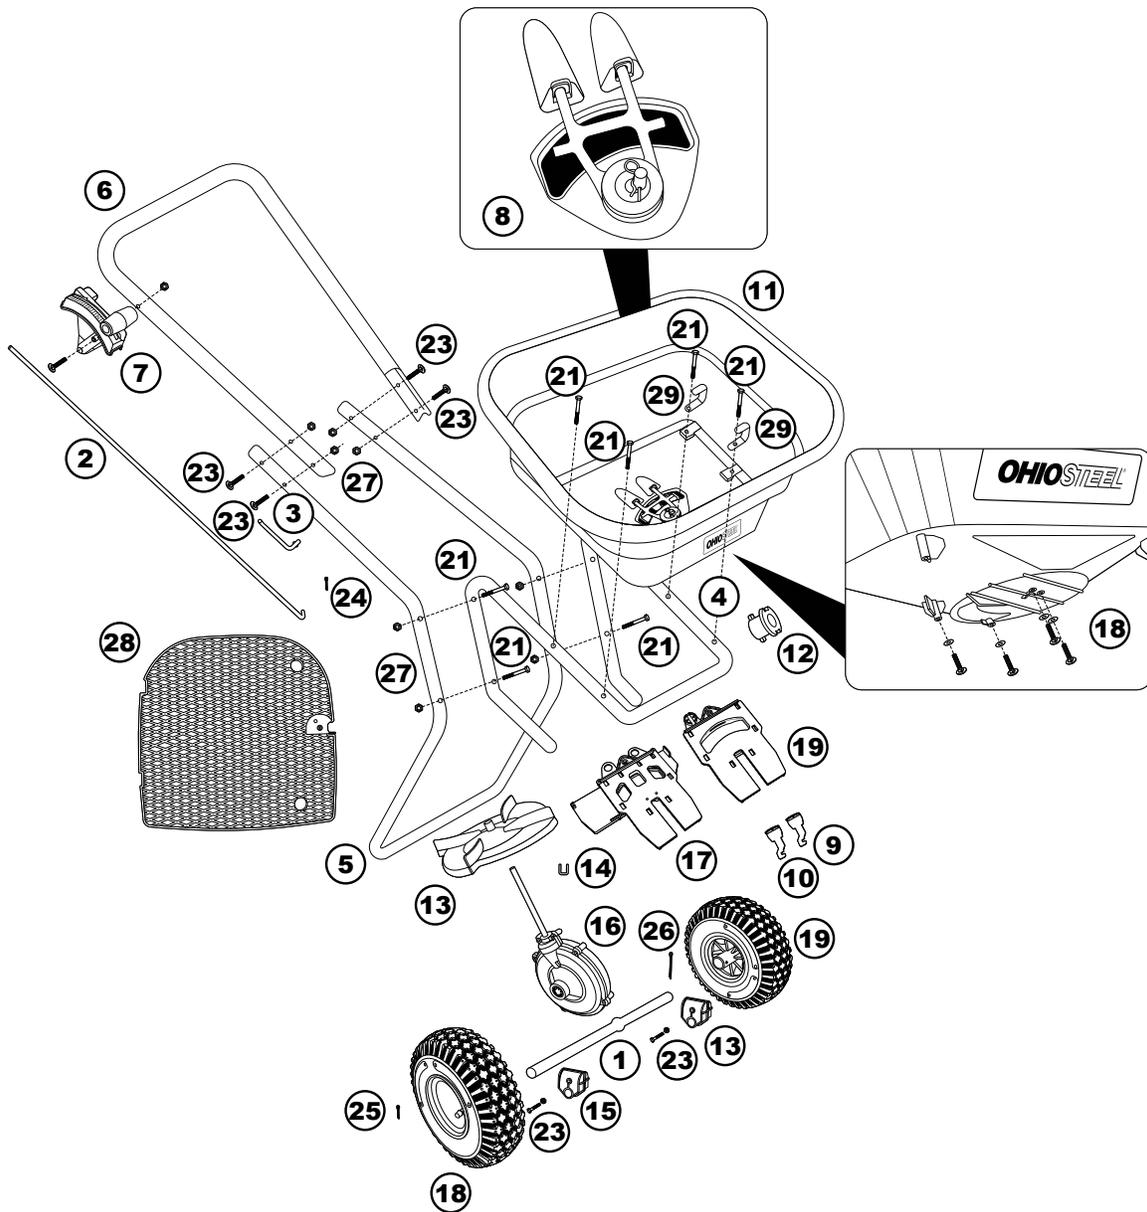

NO.	PART NO.	DESCRIPTION	QTY.	NO.	PART NO.	DESCRIPTION	QTY.
1	6005891	AXLE, TUBE, SPREADER	1	16	6005906	ASSEMBLY, GEARBOX, SPR	1
2	6005892	ROD, UPPER, SPREADER	1	17	6005907	PLATE, MATERIAL, SUMMER	1
3	6005893	ROD, LOWER, SPREADER	1	18	6005908	SCREW, SELF TAPPING, M4.5 X18	4
4	6005894	SUPPORT, HOPPER, SPREADER	1	19	6005909	PLATE, MATERIAL, WINTER	1
5	6005895	FRAME, BACK, SPREADER	1	20	6005910	WHEEL, 13 X 5.0-6 X 16.5MM	2
6	6005896	HANDLE, FORMED, SPREADER	1	21	6005911	BOLT, HEX, M6 X 60	4
7	6005897	ASSEMBLY, CONTROL, SPREADER	1	22	6005912	BOLT, HEX, M6 X 65	4
8	6005898	ASSEMBLY, AGITATOR, 10PPS100	1	23	6005913	BOLT, HEX, M6 X 45	6
9	6005899	BRACKET, AGITATOR, LEFT	1	24	6005914	PIN, COTTER, 1MM X 10MM	1
10	6005900	BRACKET, AGITATOR, RIGHT	1	25	6005915	PIN, COTTER, 3.5MM X 23MM	1
11	6005901	HOPPER, OHIO STEEL, 10 GAL	1	26	6005916	PIN, COTTER, 3.5MM X 45MM	1
12	6005902	BUSHING, HOPPER, SPREADER	1	27	6005917	NUT, HEX LOCK, M6	14
13	6005903	IMPELLER, PLASTIC, SPREADER	1	28	6005918	SIEVE, HOPPER, SPREADER	1
14	6005904	KEY, U SHAFT, SPREADER	1	29	6005919	BRACKET, SIEVE, SPREADER	1
15	6005905	BEARING, AXLE, SPREADER	1				