

REF. NO.	PART NO.	QTY.	DESCRIPTION	REF. NO.	PART NO.	QTY.	DESCRIPTION
1	524001	1	BED ASSEMBLY	14	300075	2	1/2" FLAT WASHER USS
2	524021	1	FRONT SUPPORT	15	3000613	2	1/2" HEX NUT
3	424271	4	AXLE HOLDER PLATE	16	300073	4	1" AXLE WASHER USS
4	424101	1	HITCH	17	300087	2	COTTER PIN 3/16" X 1-1/2"
5	424121	1	HITCH BRACKET	18	300084	1	HAIR PIN COTTER
6	424671	1	FRONT SUPPORT PIN	19	300151	2	REFECTOR SATELITE 2015
7	300003	1	AXLE 1" DIA.	20	3001210	4	PVC SPACER 3-13/16"
8	3000199	2	ATV TIRE	21	300222	4	1-3/4" SQUARE PLUG
9	300052	18	3/8" X 3/4" HEX BOLT	22	323042	1	ASSEMBLY MANUAL
11	300061	18	3/8" LOCK NUT	23	323031	1	BOLT BAG
12	3000524	2	1/2" X 2-3/4" HEX BOLT				
<mark>1</mark> 3	3000714	2	1/2" LOCK WASHER				


Standard hardware items can be purchased locally.

For missing parts or questions call 1-800-652-2321



FB-ATV FLATBED ATV DUMP CART

ASSEMBLY MANUAL AND PARTS LIST

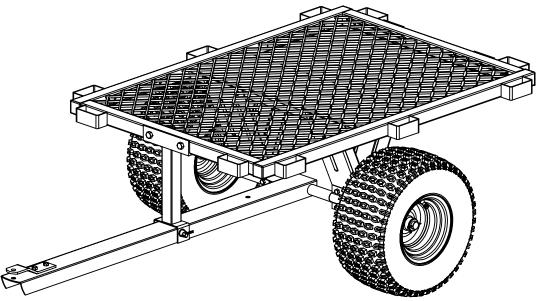

CAUTION:

ALL SAFETY

INSTRUCTIONS BEFORE USING THIS EQUIPMENT.

READ AND FOLLOW

LIMITED ONE-YEAR WARRANTY

If this product fails due to a defect in material or workmanship within one year from the date of purchase, we will at our option repair or replace it free of charge. This warranty excludes tires and wheels, which are expendable and become worn during normal use.

This warranty does not cover:

Repairs necessary because of operator abuse or negligence.
Equipment used for commercial or rental purposes.
Proof of Purchase Required For All Warranty Claims.

ORDERING INFORMATION

After the one year warranty period all parts maybe ordered by calling **1-800-652-2321**. When ordering repair parts, always give the following information: • Product -

- Model Number -
- Part Number -
- Part Description -

TOOLS REQUIRED

3/4" WRENCH AND SOCKET 9/16" WRENCH AND SOCKET PLIERS


SAFETY INSTRUCTION

DO NOT CARRY PASSENGERS IN CART. DO NOT TOW CART ON PUBLIC ROADS. NEVER EXCEED LOAD CAPACITY - 1000LBS. AVOID SUDDEN TURNS OR MANEUVERS. WHEN OPERATING ON SLOPES, USE LOWEST GROUND SPEED AND LIMIT LOAD TO 200LBS. OPERATE UP AND DOWN SLOPES, NEVER ACROSS THE FACE.

MAINTENANCE

CHECK TIRE PRESSURE REGULARLY (5 PSI RECOMMENDED.) GREASE WHEELS AT AXLE FOR LONGER LIFE. PERIODICALLY CHECK ALL BOLTS. KEEP CART CLEAN TO PREVENT RUST. STORE INSIDE A CLEAN DRY AREA.

NOTE: DO NOT TIGHTEN BOLTS AT THIS TIME. THEY WILL BE TIGHTENED AFTER
AXLE AND WHEELS HAVE BEEN INSTALLED IN A LATER STEP.

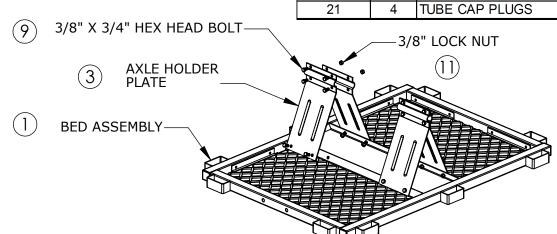

STEP 1.

- Lay cart bed upside down to install axle holder plates.
- Add four axle holder plates to undercarriage plate, as shown, with eight 3/8" x 3/4" hex bolts, and 3/8" lock nuts. NOTE: DO NOT TIGHTEN AT THIS TIME.

REF.NO.

1

2

3

4

5

6

7

8

22

23

9

11

12

13

14

15

16

17

18

19

20

OTY.

1

1

4

1

1

1

1

2

1

1

18

18

2

2

2

2

2

2

1

2

4

CARTON CONTENTS

DESCRIPTION

HITCH

AXLE

BOLT BAG

BED ASSEMBLY

FRONT SUPPORT

HITCH BRACKET

AXLE HOLDER PLATE

FRONT SUPPORT PIN

ATV TIRES - IN BOX 2

ASSEMBLY MANUAL

BOLT BAG CONTENTS

1/2" LOCK WASHER

1/2" FLAT WASHER

HAIR PIN COTTER

PVC AXLE SPACER

1" AXLE WASHER USS

3/8" LOCK NUT

1/2" HEX NUT


COTTER PIN

REFECTOR


3/8" X 3/4" HEX BOLT

1/2" X 2-3/4" HEX BOLT

• Loosely bolt together the axle holder plates with eight 3/8" x 3/4" hex bolts and 3/8" lock nuts.

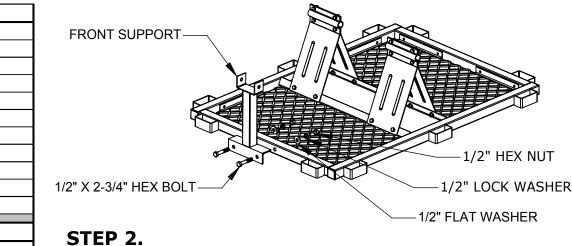

- Place front support assembly onto front of cart, as shown.
- Insert two 1/2" x 2 1/2" hex bolts through front support angle holes, and holes in cart bed tube.
- Secure in place with two 1/2" flat washers, two 1/2" lock washers, and two 1/2" hex nuts.

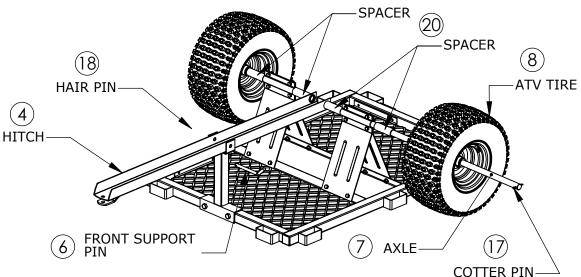

STEP 3.

- Slide axle through axle holder plates, add spacer, drawbar, add another spacer then through other set of axle plates.
- Center axle and add another spacer, axle washer, tire, axle washer, in that order to each side and secure in place by adding cotter pin in axle and spreading ends.
- Insert drawbar pin through front support assembly and drawbar, lock in place with hair pin.
- At this time, tighten ALL bolts.

NOTE: TIGHTEN ALL BOLTS.